


Split Collar Location Examples

The collar is 3/8" thick

Also reference the SPLIT COLLAR & SENSOR Install Grid

Drive Shaft Coupler Type

Use to mount sensor bracket

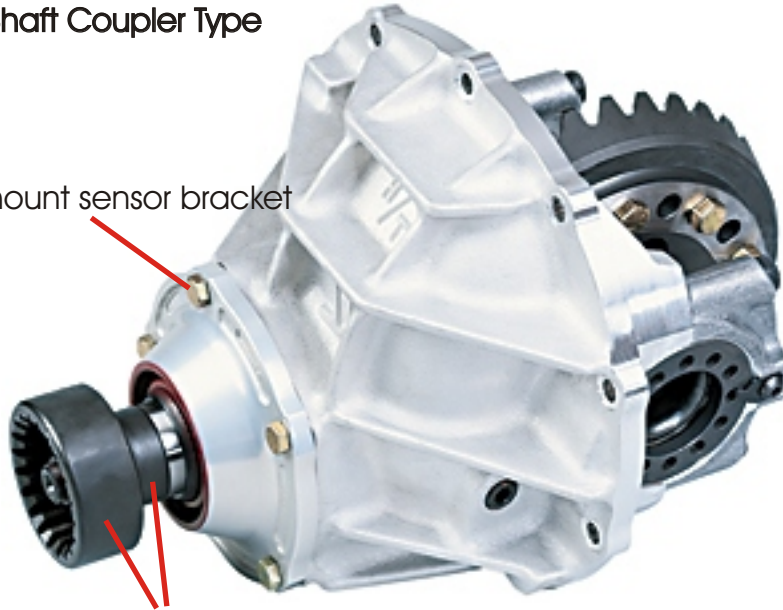

Either surface can be used to mount split magnetic collar
Provide the outside diameter to size your split collar
The smaller diameter surface is the preferred location

U Joint Yoke Type

Split collar installation example.

Sensor Bracket attaches using this stud & nut

Use this outside diameter for split collar size

