 


Split Collar & Sensor Install Guide Drive Shaft RPM

Split-Collar inside diameter should match the Yoke outside diameter for proper fit. The yoke must maintain a constant position to allow the magnets inside the Split-Collar to reliably pass directly under the end of the sensor.

Certain rear end housing types such as the Strange Ultra case has a threaded bore 5/16"x24 for the sensor; no external bracket is required to hold it in place.

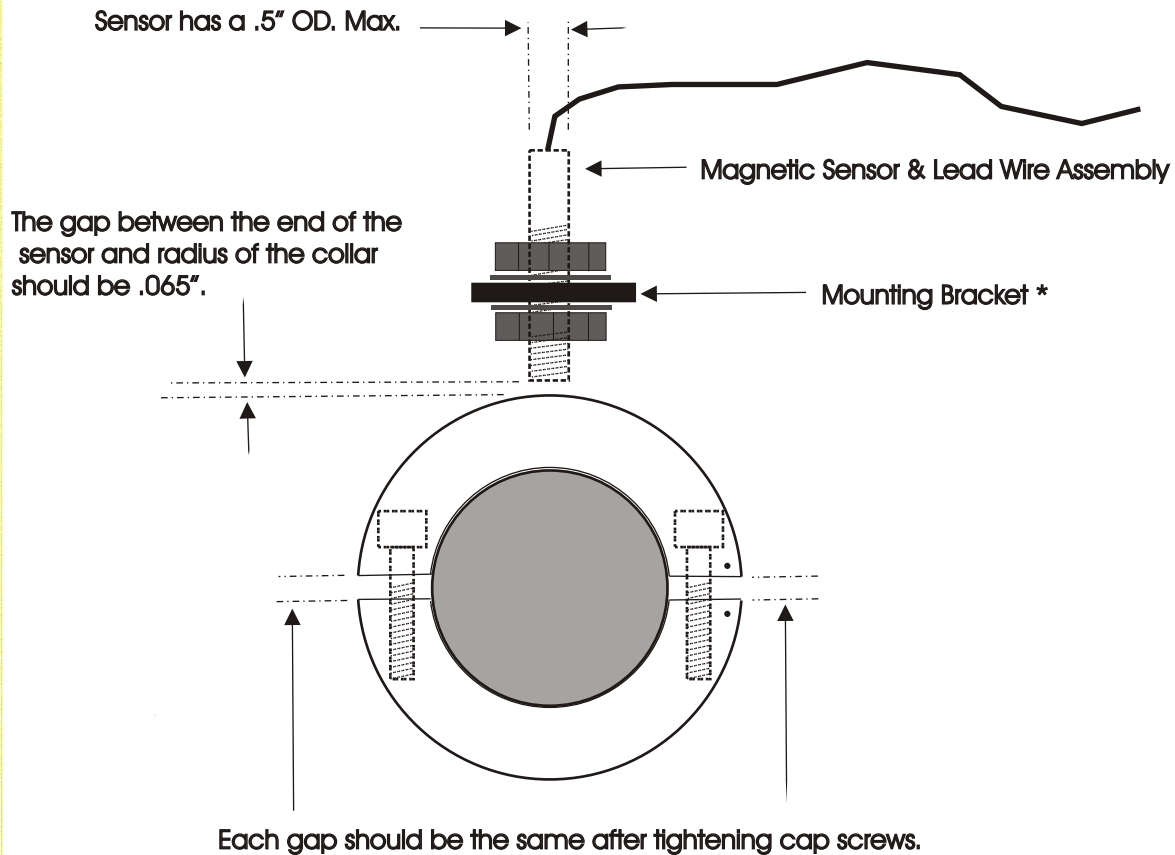

* If you can see the bracket deflect when pushing with fingers, it is not stiff enough. The bracket must be made to resist movement from vibration.

Each half of the split collar has a small machine mark, they should be facing in the same direction.

The split collar is 3/8" thick.