DAS and HB Drill & Mounting Template

Also Refer to the:

Interconnect & Mounting Guide Document

Drill locations shown at 1:1 scale

Deburr All Drill Holes


DAS Mounting Template

Product Installation Sheet

Platform and drill holes should be positioned level and square as the car sits with wheels on the ground with driver and fuel. The platform must be a rigid structure allowing a minimal amount of flexing.


Drill 4 holes with a 3/16" bit.

Check Print Scale with Ruler

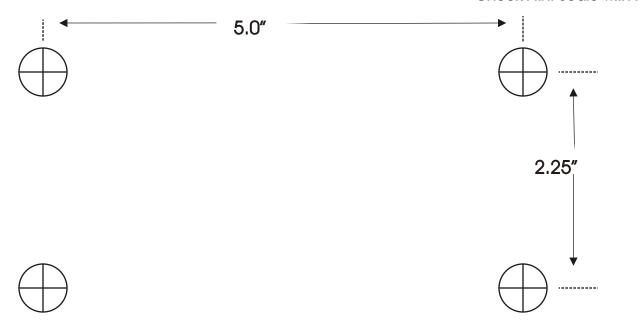

HB Mounting Template

Drill 4 holes with a 1/8" bit.

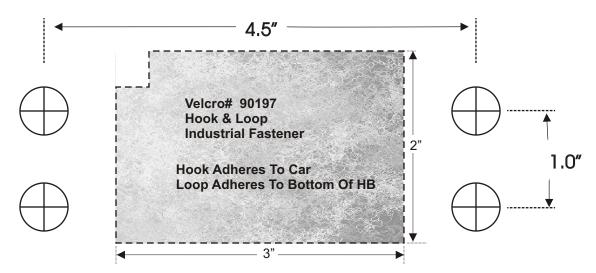

Use a Nylon Cable Tie to Secure the HB at Each End to the Mounting Surface.